

QUICK START GUIDE

→ Visit HoleMorePutts.com/register for more

Register your HOLE MORE PUTTS™ Tablet

To access your data and for personalised instruction first register your Tablet.

– iOS Mobile / iOS Tablet

Download the HOLE MORE PUTTS™ App from the App Store and follow the on screen instructions.

– PC / Laptop

Go to HoleMorePutts.com/register and follow the on screen instructions.

Pairing your Putter with your Tablet

Pair your Tablet with your putter for optimum performance.

 
First turn on your Tablet and go to:

Menu* → Pairing Your Putter


– Place the Pairing Stand and putter as per image below and follow the on screen instructions.

– Ensure that the putter is not moving during this process.

Right handed

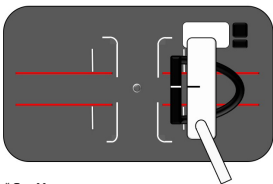

Left handed

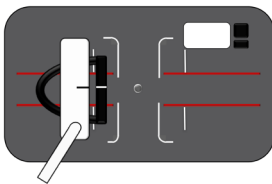 

* See Menu

Lining up your Tablet

– Select a flat area of the green (or carpet). If indoors, use your Tablet in a well lit room.

– Push a tee in to the surface (or place a coin, can etc.) as a target.




– Place your HOLE MORE PUTTS™ Tablet 8-10' away from the target.

– Align the centre line on your Tablet with the centre of the target.

– Place an alignment stick, club or rolled-up golf towel across the aim-line approximately halfway between Tablet and target.

(This will separate stroke from result and stop you adjusting your set up or aim to compensate for misses.)

Taking a Putt

- Place your Tablet on the green (or carpet) and line it up 8-10' away from the target.
- Press  and then press .
- Place a ball on the centre spot .
- Address the ball either right handed or left handed.
- When the light turns from flashing red to steady green, take a putt.
- After each set of 5 putts, your Tablet will calculate your Index.

Getting used to your Tablet


Before taking your first real measures, get used to your Tablet and uploading your data.

- Take 4 sets of 5 putts.
- Upload the data (refer to 'Uploading your Data' information below).
- Delete these sets using the HOLE MORE PUTTS™ Website, HoleMorePutts.com

Uploading your Data

Once you have taken one or more sets of putts, you can upload them to your account via App or Website.


– Using your HOLE MORE PUTTS™ App

To enable Wireless on your Tablet, go to the Menu and press the up ↑ or down ↓ arrows on the keypad. To select press .

Menu* → Options → Connect: Wireless

- Open the HOLE MORE PUTTS™ App (download from the App Store).
- Press 'Sync my Tablet'.

– Using your HOLE MORE PUTTS™ Website

To enable USB on your Tablet, go to the Menu and press the up ↑ or down ↓ arrows on the keypad. To select press .

Menu* → Options → Connect: USB

- Connect your Tablet to your PC / Laptop with the USB cable.
- Go to HoleMorePutts.com/register and follow the on screen instructions.

* See Menu

 
Menu

To access the Menu, first turn on your Tablet and press the up ↑ or down ↓ on the keypad.

You are able to access a number of options on your Tablet by pressing the up ↑ or down ↓ and left ← or right → arrows on the keypad.

To select press . To cancel press .

- Access Results History.
- Pairing your Putter with your Tablet.
- Set the Date / Time.
- Give your Tablet a name.

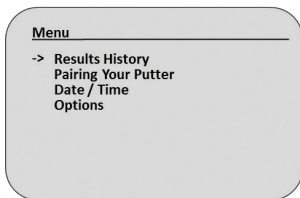


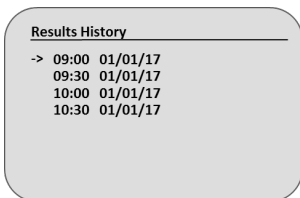 
Results History

To access sets of data not yet uploaded to the HOLE MORE PUTTS™ App or Website, go to:

Menu → Results History

You will find a list of data sets that have not yet been uploaded.

Press the up ↑ or down ↓ and left ← or right → arrows on the keypad to navigate between the sets. To select press .



 
Date / Time

To set the date and time of your Tablet, go to:

Menu → Date / Time

Press the up ↑ or down ↓ and left ← or right → arrows on the keypad to navigate between the characters.


To select press . To cancel press .

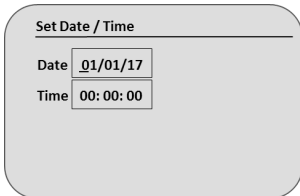

Options: Name: My Tablet

To change the name of your Tablet, go to:

 Menu → Options → Name: My Tablet

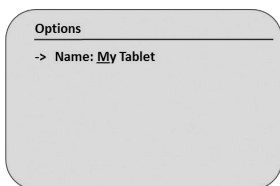


Options: Sweet-Spot

Most putters have a 'Sweet-Spot' in the centre of the putter face.

If you know that your putter's 'Sweet-Spot' is not in the centre, you can manually adjust your Tablet to account for this.

Menu → Options → Sweet-Spot

 E.G. for a putter with a 'Sweet-Spot' offset by 5mm towards the heel, adjust the setting to read - 5mm. For a putter with a 'Sweet-Spot' offset by 5mm towards the toe, adjust the setting to read + 5mm.

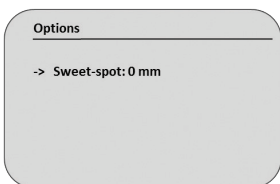

Understanding the 5 Key Factors

For more information on how to understand the 5 Key Factors of the putting stroke, visit holemoreputts.com

Further FAQ & Support

For more assistance and guidance on how to use your HOLE MORE PUTTS™ Tablet, visit holemoreputts.com/support

Contact Details

SQ9
Guinness Enterprise Centre
Taylor's Lane, Dublin 8, Ireland
Tel: +353 (0)1 415 1207
Email: support@holemoreputts.com



A product of

